

LIYU-BYHX SYSTEM ERROR AND SOLUTIONS

Error code	Report errors and solutions
80070004	HB1-1 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070104	HB1-2 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070204	HB1-3 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070304	HB1-4 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070404	HB1-5 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070504	HB1-6 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070604	HB1-7 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070704	HB1-8 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070804	HB1-9 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070904	HB1-10 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070A04	HB1-11 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070B04	HB1-12 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070C04	HB1-13 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070D04	HB1-14 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070E04	HB1-15 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80070F04	HB1-16 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080004	HB2-1 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080104	HB2-2 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080204	HB2-3 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080304	HB2-4 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080404	HB2-5 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080504	HB2-6 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board

80080604	HB2-7 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080704	HB2-8 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080804	HB2-9 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080904	HB2-10 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080A04	HB2-11 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080B04	HB2-12 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080C04	HB2-13 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080D04	HB2-14 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080E04	HB2-15 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
80080F04	HB2-16 Failed to configure FPGA program, upgrade the latest program of the Head driver board or replace the Head driver board
40070097	HB1-1 SATALink status error, Re-plug or replace
40070197	HB1-2 SATALink status error, Re-plug or replace
40070297	HB1-3 SATALink status error, Re-plug or replace
40070397	HB1-4 SATALink status error, Re-plug or replace
40070497	HB1-5 SATALink status error, Re-plug or replace
40070597	HB1-6 SATALink status error, Re-plug or replace
40070697	HB1-7 SATALink status error, Re-plug or replace
40070797	HB1-8 SATALink status error, Re-plug or replace
40070897	HB1-9 SATALink status error, Re-plug or replace
40070997	HB1-10 SATALink status error, Re-plug or replace
40070A97	HB1-11 SATALink status error, Re-plug or replace
40070B97	HB1-12 SATALink status error, Re-plug or replace
40070C97	HB1-13 SATALink status error, Re-plug or replace
40070D97	HB1-14 SATALink status error, Re-plug or replace
40070E97	HB1-15 SATALink status error, Re-plug or replace
40070F97	HB1-16 SATALink status error, Re-plug or replace
40080097	HB2-1 SATALink status error, Re-plug or replace
40080197	HB2-2 SATALink status error, Re-plug or replace
40080297	HB2-3 SATALink status error, Re-plug or replace
40080397	HB2-4 SATALink status error, Re-plug or replace
40080497	HB2-5 SATALink status error, Re-plug or replace
40080597	HB2-6 SATALink status error, Re-plug or replace
40080697	HB2-7 SATALink status error, Re-plug or replace
40080797	HB2-8 SATALink status error, Re-plug or replace
40080897	HB2-9 SATALink status error, Re-plug or replace
40080997	HB2-10 SATALink status error, Re-plug or replace

40080A97	HB2-11 SATALink status error, Re-plug or replace
40080B97	HB2-12 SATALink status error, Re-plug or replace
40080C97	HB2-13 SATALink status error, Re-plug or replace
40080D97	HB2-14 SATALink status error, Re-plug or replace
40080E97	HB2-15 SATALink status error, Re-plug or replace
40080F97	HB2-16 SATALink status error, Re-plug or replace
40070095	HB1-1 SATALink status error, Re-plug or replace
40070195	HB1-2 SATALink status error, Re-plug or replace
40070295	HB1-3 SATALink status error, Re-plug or replace
40070395	HB1-4 SATALink status error, Re-plug or replace
40070495	HB1-5 SATALink status error, Re-plug or replace
40070595	HB1-6 SATALink status error, Re-plug or replace
40070695	HB1-7 SATALink status error, Re-plug or replace
40070795	HB1-8 SATALink status error, Re-plug or replace
40070895	HB1-9 SATALink status error, Re-plug or replace
40070995	HB1-10 SATALink status error, Re-plug or replace
40070A95	HB1-11 SATALink status error, Re-plug or replace
40070B95	HB1-12 SATALink status error, Re-plug or replace
40070C95	HB1-13 SATALink status error, Re-plug or replace
40070D95	HB1-14 SATALink status error, Re-plug or replace
40070E95	HB1-15 SATALink status error, Re-plug or replace
40070F95	HB1-16 SATALink status error, Re-plug or replace
40080095	HB2-1 SATALink status error, Re-plug or replace
40080195	HB2-2 SATALink status error, Re-plug or replace
40080295	HB2-3 SATALink status error, Re-plug or replace
40080395	HB2-4 SATALink status error, Re-plug or replace
40080495	HB2-5 SATALink status error, Re-plug or replace
40080595	HB2-6 SATALink status error, Re-plug or replace
40080695	HB2-7 SATALink status error, Re-plug or replace
40080795	HB2-8 SATALink status error, Re-plug or replace
40080895	HB2-9 SATALink status error, Re-plug or replace
40080995	HB2-10 SATALink status error, Re-plug or replace
40080A95	HB2-11 SATALink status error, Re-plug or replace
40080B95	HB2-12 SATALink status error, Re-plug or replace
40080C95	HB2-13 SATALink status error, Re-plug or replace
40080D95	HB2-14 SATALink status error, Re-plug or replace
40080E95	HB2-15 SATALink status error, Re-plug or replace
40080F95	HB2-16 SATALink status error, Re-plug or replace
40070092	HB1-1 Head board drive unit malfunction, Restart or replace the head driver board
40070192	HB1-2 Head board drive unit malfunction, Restart or replace the head driver board
40070292	HB1-3 Head board drive unit malfunction, Restart or replace the head driver board
40070392	HB1-4 Head board drive unit malfunction, Restart or replace the head driver board
40070492	HB1-5 Head board drive unit malfunction, Restart or replace the head driver board
40070592	HB1-6 Head board drive unit malfunction, Restart or replace the head driver board
40070692	HB1-7 Head board drive unit malfunction, Restart or replace the head driver board

40070792	HB1-8 Head board drive unit malfunction, Restart or replace the head driver board
40070892	HB1-9 Head board drive unit malfunction, Restart or replace the head driver board
40070992	HB1-10 Head board drive unit malfunction, Restart or replace the head driver board
40070A92	HB1-11 Head board drive unit malfunction, Restart or replace the head driver board
40070B92	HB1-12 Head board drive unit malfunction, Restart or replace the head driver board
40070C92	HB1-13 Head board drive unit malfunction, Restart or replace the head driver board
40070D92	HB1-14 Head board drive unit malfunction, Restart or replace the head driver board
40070E92	HB1-15 Head board drive unit malfunction, Restart or replace the head driver board
40070F92	HB1-16 Head board drive unit malfunction, Restart or replace the head driver board
40080092	HB2-1 Head board drive unit malfunction, Restart or replace the head driver board
40080192	HB2-2 Head board drive unit malfunction, Restart or replace the head driver board
40080292	HB2-3 Head board drive unit malfunction, Restart or replace the head driver board
40080392	HB2-4 Head board drive unit malfunction, Restart or replace the head driver board
40080492	HB2-5 Head board drive unit malfunction, Restart or replace the head driver board
40080592	HB2-6 Head board drive unit malfunction, Restart or replace the head driver board
40080692	HB2-7 Head board drive unit malfunction, Restart or replace the head driver board
40080792	HB2-8 Head board drive unit malfunction, Restart or replace the head driver board
40080892	HB2-9 Head board drive unit malfunction, Restart or replace the head driver board
40080992	HB2-10 Head board drive unit malfunction, Restart or replace the head driver board
40080A92	HB2-11 Head board drive unit malfunction, Restart or replace the head driver board
40080B92	HB2-12 Head board drive unit malfunction, Restart or replace the head driver board
40080C92	HB2-13 Head board drive unit malfunction, Restart or replace the head driver board
40080D92	HB2-14 Head board drive unit malfunction, Restart or replace the head driver board
40080E92	HB2-15 Head board drive unit malfunction, Restart or replace the head driver board
40080F92	HB2-16 Head board drive unit malfunction, Restart or replace the head driver board
04070064	HB1-1 Inconsistent driver board versions, Please upgrade again
04070164	HB1-2 Inconsistent driver board versions, Please upgrade again
04070264	HB1-3 Inconsistent driver board versions, Please upgrade again
04070364	HB1-4 Inconsistent driver board versions, Please upgrade again
04070464	HB1-5 Inconsistent driver board versions, Please upgrade again
04070564	HB1-6 Inconsistent driver board versions, Please upgrade again
04070664	HB1-7 Inconsistent driver board versions, Please upgrade again
04070764	HB1-8 Inconsistent driver board versions, Please upgrade again
04070864	HB1-9 Inconsistent driver board versions, Please upgrade again
04070964	HB1-10 Inconsistent driver board versions, Please upgrade again
04070A64	HB1-11 Inconsistent driver board versions, Please upgrade again
04070B64	HB1-12 Inconsistent driver board versions, Please upgrade again
04070C64	HB1-13 Inconsistent driver board versions, Please upgrade again
04070D64	HB1-14 Inconsistent driver board versions, Please upgrade again
04070E64	HB1-15 Inconsistent driver board versions, Please upgrade again
04070F64	HB1-16 Inconsistent driver board versions, Please upgrade again
04080064	HB2-1 Inconsistent driver board versions, Please upgrade again
04080164	HB2-2 Inconsistent driver board versions, Please upgrade again
04080264	HB2-3 Inconsistent driver board versions, Please upgrade again
04080364	HB2-4 Inconsistent driver board versions, Please upgrade again

04080464	HB2-5 Inconsistent driver board versions, Please upgrade again
04080564	HB2-6 Inconsistent driver board versions, Please upgrade again
04080664	HB2-7 Inconsistent driver board versions, Please upgrade again
04080764	HB2-8 Inconsistent driver board versions, Please upgrade again
04080864	HB2-9 Inconsistent driver board versions, Please upgrade again
04080964	HB2-10 Inconsistent driver board versions, Please upgrade again
04080A64	HB2-11 Inconsistent driver board versions, Please upgrade again
04080B64	HB2-12 Inconsistent driver board versions, Please upgrade again
04080C64	HB2-13 Inconsistent driver board versions, Please upgrade again
04080D64	HB2-14 Inconsistent driver board versions, Please upgrade again
04080E64	HB2-15 Inconsistent driver board versions, Please upgrade again
04080F64	HB2-16 Inconsistent driver board versions, Please upgrade again